

**HS-2410W Series 3"Printer Jumper Setting**● **DIP SWITCH 1 :**

<b>SWITCH 1</b>		<b>FUNCTION</b>
<b>1</b>	<b>2</b>	<b>Baud Rate</b>
OFF	OFF	Reserve
OFF	ON	Reserve
ON	OFF	USB PRINTER CALSS
<b>ON</b>	<b>ON</b>	<b>USB CDC</b>
<b>3</b>		<b>Cut Paper after Cover Return</b>
OFF		Disable
<b>ON</b>		<b>Enable</b>
<b>4</b>		<b>Full Cut Paper</b>
OFF		Disable
<b>ON</b>		<b>Enable</b>
<b>5</b>		<b>Busy condition</b>
<b>OFF</b>		<b>Enable</b>
ON		Disable
<b>6</b>		<b>Before Cut Paper</b>
<b>OFF</b>		<b>Normal Cut</b>
ON		Cut and without paper feed
<b>7</b>		<b>Auto cutter</b>
<b>OFF</b>		<b>Enable</b>
ON		Disable
<b>8</b>		<b>Reserve</b>
<b>OFF</b>		Reserve
ON		Reserve

● SOFTWARE SWITCH 2 :

SWITCH 2	FUNCTION
<b>1</b>	<b>Software Switch Selection</b>
<b>OFF</b>	<b>Set Hardware Switch 1 Valid</b>
ON	Set Hardware Switch 1 Invalid (Software switch 1 will valid instead of hardware switch 1)
<b>2</b>	<b>Paper width</b>
<b>OFF</b>	<b>80mm</b>
ON	58mm
<b>3</b>	<b>Printable width</b>
<b>OFF</b>	<b>512dots</b>
ON	576dots
<b>4</b>	<b>Paper Feed Back</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>5</b>	<b>Raster Bitmap Printing</b>
<b>OFF</b>	<b>Batch Print</b>
ON	Line Print
<b>6</b>	<b>Parity Check</b>
<b>OFF</b>	<b>NONE</b>
ON	EVEN
<b>7</b>	<b>Handshaking</b>
<b>OFF</b>	<b>DTR/DSR</b>
ON	XON/XOFF
<b>8</b>	<b>&lt; CR &gt; Auto Line Feed</b>
<b>OFF</b>	<b>Disable</b>
ON	Enable

● SOFTWARE SWITCH 3 :

SWITCH 3			FUNCTION
1			UPOS Write
OFF			Disable
ON			Enable
2			Beep Sound after Cut paper
OFF			Disable
ON			Enable
3	4	5	Print Density
OFF	OFF	OFF	100%
ON	OFF	OFF	110%
OFF	ON	OFF	120%
ON	ON	OFF	130%
6			Print Speed
OFF			170mm/s
ON			200mm/s
7			Thai Font mode
OFF			1 PASS
ON			3 PASS
8			Cover Open Message
OFF			Disable
ON			Enable

● SOFTWARE SWITCH 4 :

SWITCH 4		FUNCTION
1		Print Speed 120mm/s
OFF		Disable
ON		Enable
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		Reserve
OFF		Reserve
ON		Reserve

※ JP4: Use for Firmware download.

JP4	FUNCTION
Open	Normal Mode
Short	Firmware download mode